




**THE GROUND CONTROL LEADERS**




**Model TR68 & TR88**

## **Turf Reinforcement Mat Anchor System**

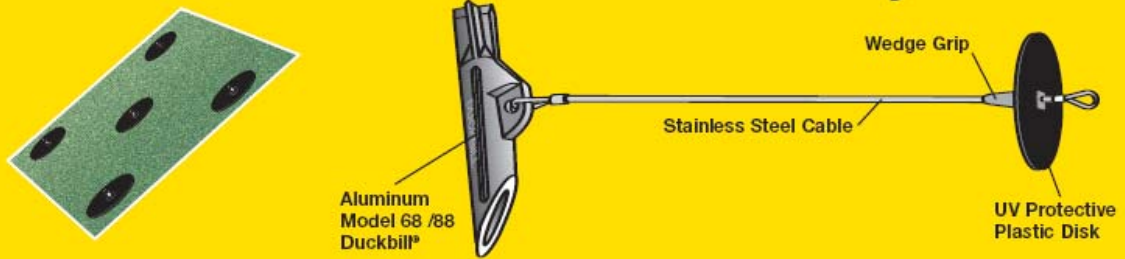

### **Driving Anchor**

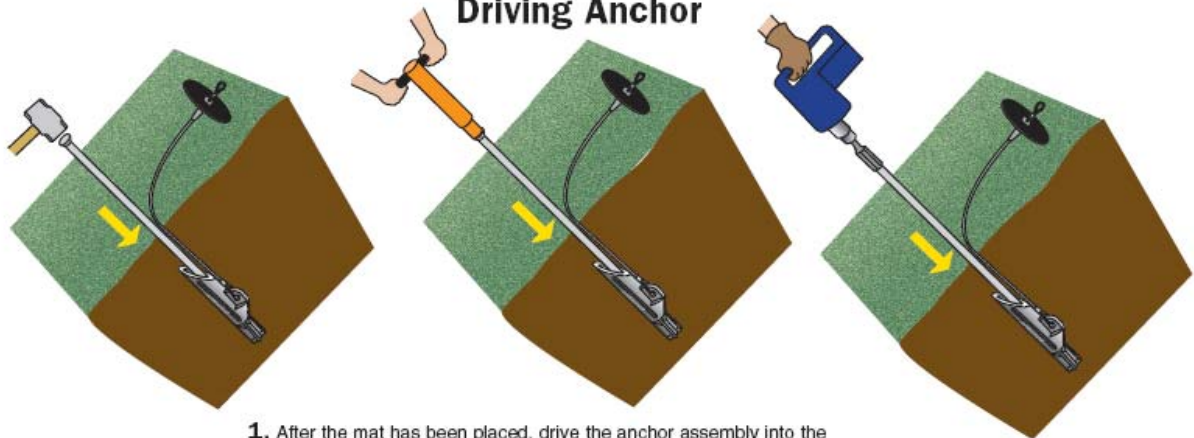


**1.** After the mat has been placed, drive the anchor assembly into the soil using a sledge hammer or small jackhammer or impact hammer.

### **Rod Removal**




**2.** After driving the anchor to depth, remove the drive rod.

### **Setting Anchor**

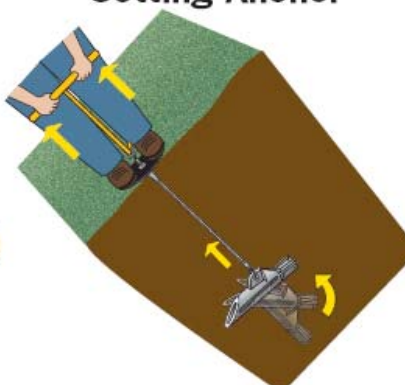

**3.** Insert the anchor hook through the cable end loop. While stepping on the plastic disk, pull up on the hook, rotating the anchor to the locked position. Push the wedge grip down the cable until flush with the top of the disk.

### **Terminate**

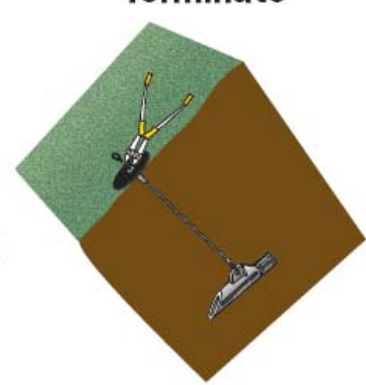

**4.** Remove excess cable with a wire cutter.

**(See reverse side for rapid installation methods)**



**THE GROUND CONTROL LEADERS**



## Rapid Installation Methods



Sledge Hammer



Slide Hammer



Impact Hammer - Electric, Battery,  
Hydraulic and/or Pneumatic



Jack Hammer

### Setting the Anchor



Insert the anchor hook through the cable end loop.



Pull up on the hook, rotating the anchor to the locked position.